



**Waterproof Heat Shrink Wire Connector Application:**

Crimp each end into the connector with a wire crimp tool (tool not provided).

With a heat gun or heat torch, heat the connector until it shrinks completely around each wire end. Make sure you do not burn the wire jacket.

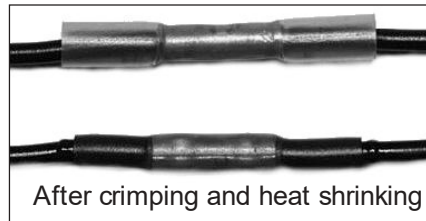

\*\*\*After both the power and ground connectors are installed, completely wrap the cable connections with electrical tape, heat shrink tubing, or other environmental protections.

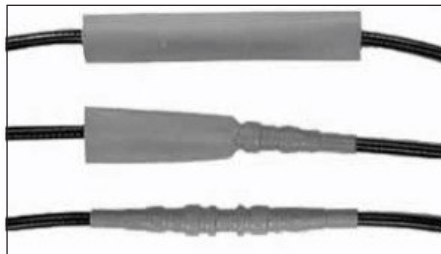

PP-003-0008 Rev B  
December 2015

Right Weigh, Inc.  
Hillsboro, Oregon, USA  
[www.rwls.com](http://www.rwls.com)

©2015 Right Weigh, Inc. All rights reserved.



**Installation Kit for Exterior  
Digital Load Scales**

201-SK



**For installing a new air line and power cable  
extension from a Right Weigh digital gauge to an  
air suspension and power source.**

For gauge series 201

**Parts Included:**

